

ACCESSORIES

These accessories fit all our standard models and must be ordered separately.



A EXTENSION TUBE

The flow from the filter must come out below the oil level to avoid possible generation of free air or foam. When necessary an extension tube can be fitted onto the knobs of the bowl end.

Ø40mm to suit FR1 size 30-43, FR6 size 20-31, FRT size 20-45, FRM size 40-45

ET2250	extension tube 250 mm long
ET2500	extension tube 500 mm long

Ø65mm to suit FRT size 50-66

ET4200	extension tube 200 mm long
ET4500	extension tube 500 mm long

B CONNECTION TUBE

Connection tube is the necessary device between filter bowl and extension tubes (ET2250 / ET2500 / ET4200 / ET4500) and/or diffuser (DF040 / DF065). Its plug and play option makes it easy to install and versatile.

Ø40mm to suit FR1 size 30-43, FR6 size 20-31, FRT size 20-45, FRM size 40-45

CT2250	connection tube 250 mm long
--------	-----------------------------

Ø65mm to suit FRT size 50-66

CT4200	connection tube 200 mm long
--------	-----------------------------

C DIFFUSER

Diffuser is an effective way to reduce foaming and turbulence normally caused by return lines. Plug and play option to be directly installed on the filter bowl or to connection tube (CT2250/CT4200). Installation of a diffuser in the hydraulic tank is an easy way to ensure the reliability of the overall system. Diffuser must always be installed below the minimum oil level.

Ø40mm to suit FR1 size 30-43, FR6 size 20-31, FRT size 20-45, FRM size 40-45

DF040	diffuser Ø 40 mm
-------	------------------

Ø65mm to suit FRT size 50-66

DF065	diffuser Ø 65 mm
-------	------------------