



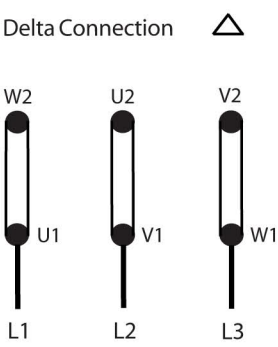



All rotation directions are based when viewed at shaft

MS Three Phase Motors

Connect links as shown below

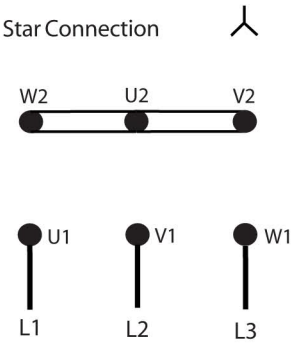

MY Single Phase - Perm Cap

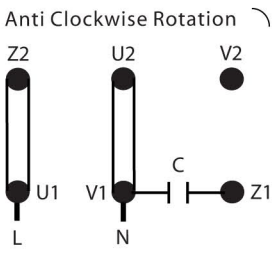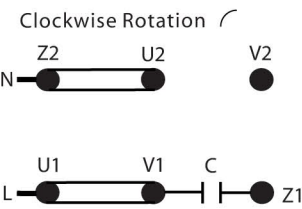

ML Single Phase - Cap Start / Cap Run

