

# FI141

## FIAT Doblò - 1,6 Multijet

Dal 2010 – motore 1598 cc - 4 cilindri – 105 HP – Euro 5 - con A/C




Since 2010 – engine 1598 cc - 4 cylinders – 105 HP – Euro 5 - with A/C

### Istruzioni di montaggio kit innesto elettromagnetico

- Eliminare le staffe di fissaggio dei tubi aria condizionata ( A foto 1) , poi spingere verso l'alto i tubi , per permettere il montaggio delle staffe innesto elettromagnetico e della pompa
- Eliminare le viti di fissaggio della puleggia ( B foto 1) poi inserire il mozzo S
- Eliminare la vite C , al suo posto montare la staffa F , fissando con vite fornita (foto 3 e 4) , senza stringere a fondo la vite
- Eliminare la vite D , al suo posto montare la staffa G , utilizzando vite fornita (foto 5 e 6) , senza stringere a fondo la vite
- Nei fori filettati E E montare la staffa H (foto 7), utilizzando viti fornite, senza stringere a fondo le viti
- Montare la puleggia P , utilizzando le viti fornite (foto 8)
- Fissare la staffa di supporto innesto elettromagnetico e pompa nei punti L – M - N – O , inserendo nel punto L il distanziale fornito , poi stringere tutti i bulloni delle staffe (foto 9 e 10))
- Montare l'innesto elettromagnetico e fissarlo assieme alla pompa , poi inserire la cinghia (foto 11)
- Montare la puleggia tendicinghia e regolare la tensione della cinghia (foto 12)

### Electromagnetic coupling kit installation instructions

- Eliminate the fixing brackets pipe air conditioning (A photo 1), and then push up the pipes to permit the mounting the brackets of the electromagnetic clutch and the pump
- Eliminate the screws holding the pulley (B photo 1) and then insert the hub S
- Eliminate the screw C, in its place mount the bracket F, using screw provided (pictures 3 and 4), without tighten the screw
- Eliminate the screw D, in its place mount the bracket G, using screw provided (pictures 5 and 6), without tighten the screw
- In EE threaded holes mount the bracket H (picture 7), using screws provided , without tighten the screws
- Install the pulley P, using the supplied screws (photo 8)
- Install the bracket of the electromagnetic clutch , in the points L - M - N -O, by inserting the spacer provided at the point L, then tighten all bolts of the brackets(photos 9 -10)
- Install the electromagnetic clutch and fixing with the pump, then put the belt (photo11)
- Install the idler pulley and adjust the belt tension (photo 12)

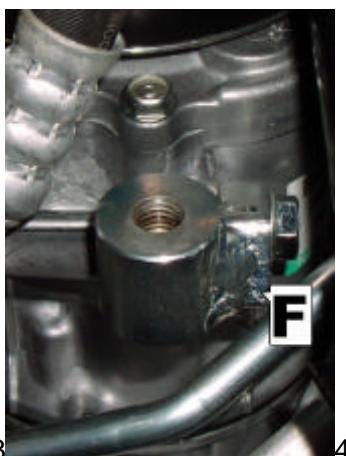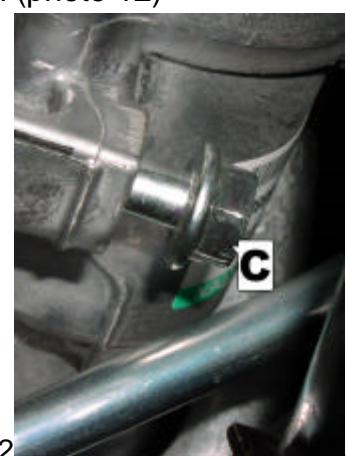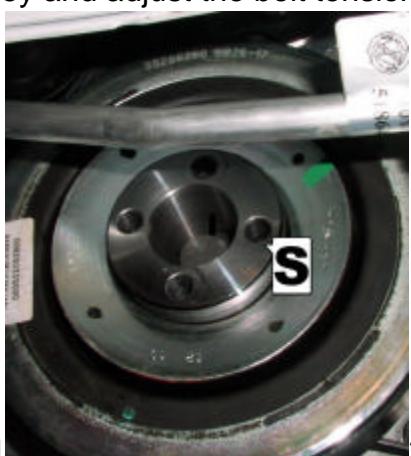

4

