

FI006

FIAT Ducato 120 Multijet

Dal 2006 – motore 2286 cc – 4 cilindri – senza A/C


Since 2006 – engine 2286 cc – 4 cylinders – without A/C

Istruzioni di montaggio kit innesto elettromagnetico

- smontare cinghia alternatore
- smontare ed eliminare puleggia motore, svitando solo i quattro bulloni M8, non smontare assolutamente il bullone centrale
- montare puleggia fornita utilizzando bulloneria originale
- montare piastra di supporto innesto elettromagnetico nei punti di foto 1
- montare staffa di rinforzo completa di puleggia tendicinghia nei punti di foto 2
- rimontare cinghia alternatore
- montare innesto elettromagnetico completo di pompa (foto 3)
- montare e regolare tensione cinghia innesto elettromagnetico (foto 4)

Electromagnetic coupling kit installation instructions

- Disassemble alternator belt
- Eliminate engine pulley ,removing only four screws M8
- Absolutely not remove the center bolt
- Mount provided pulley with the original screws
- Mounting electromagnetic clutch bracket in the points of photo 1
- Mount reinforcement bracket complete with idler pulley in the points of photo 2
- Reassemble alternator belt
- Mount electromagnetic clutch complete with pump (photo 3)
- Assemble and adjust belt tension (photo 4)

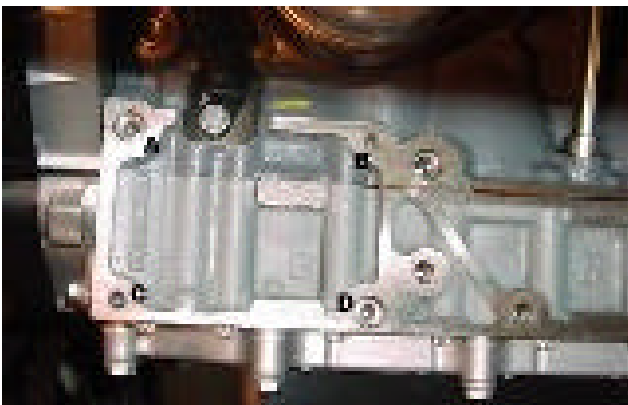

1



2



3



4