


# Barrel Flow Control Valves With Check

TIPO / TYPE  
**VRF**

SCHEMA IDRAULICO  
HYDRAULIC DIAGRAM

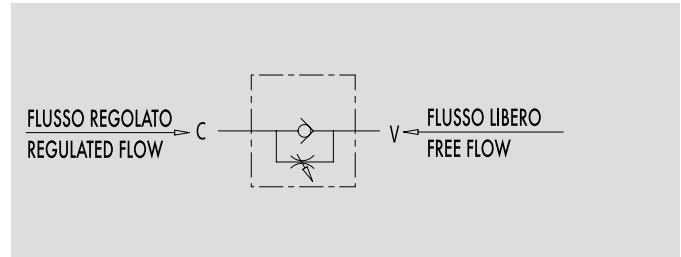

## BARREL FLOW CONTROL VALVES WITH CHECK

### USE AND OPERATION:

This valve is used to adjust flow speed of actuators in one direction; flow is free in the reverse one. As pressure compensation is not provided, flow adjustment depends on pressure and oil viscosity.

### MATERIALS AND FEATURES:

Body: zinc-plated steel  
Internal parts: hardened and ground steel  
Seal: BUNA N standard  
Tightness: by diameter combination. Minor leakage with closed valve


### APPLICATIONS:

Connect V to the pressure flow and C to the actuator to set. The flow is adjusted from C to V and free in the reverse direction. When used on actuator with double pilot check valve, VRF has to be mounted between the actuator and the double pilot check valve. Flow adjustment is made by rotating the coupling: by clockwise rotation flow increases and vice versa. Once the flow has been set, lock the nut in order to keep the desired settings even in case of vibrations.


PERDITE DI CARICO  
PRESSURE DROPS CURVE

Temperatura olio: 50 °C - Viscosità olio: 30 cSt  
Oil temperature: 50 °C - Oil viscosity: 30 cSt


STROZZATORE TUTTO CHIUSO - FULLY CLOSED THROTTLE

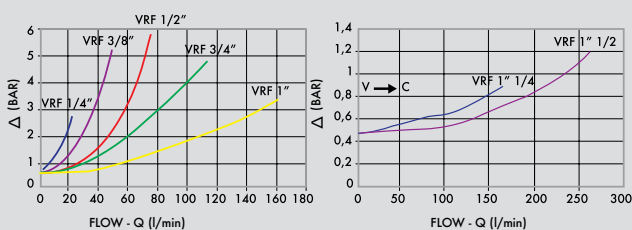

STROZZATORE TUTTO APERTO - FULLY OPENED THROTTLE

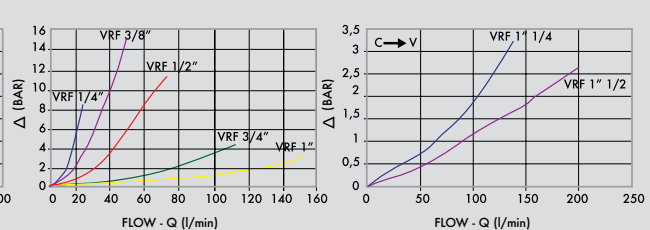

CODICE CODE	SIGLA TYPE	PORTATA MAX MAX FLOW Lt. / min	PRESSIONE MAX MAX PRESSURE Bar	PRESSIONE APERTURA CRACKING PRESSURE Bar
<b>BFCVC04</b>	VRF 1/4"	20	300	0,5
<b>BFCVC06</b>	VRF 3/8"	45	300	0,5
<b>BFCVC08</b>	VRF 1/2"	70	300	0,5
<b>BFCVC12</b>	VRF 3/4"	110	250	0,5
<b>BFCVC16</b>	VRF 1"	160	250	0,5

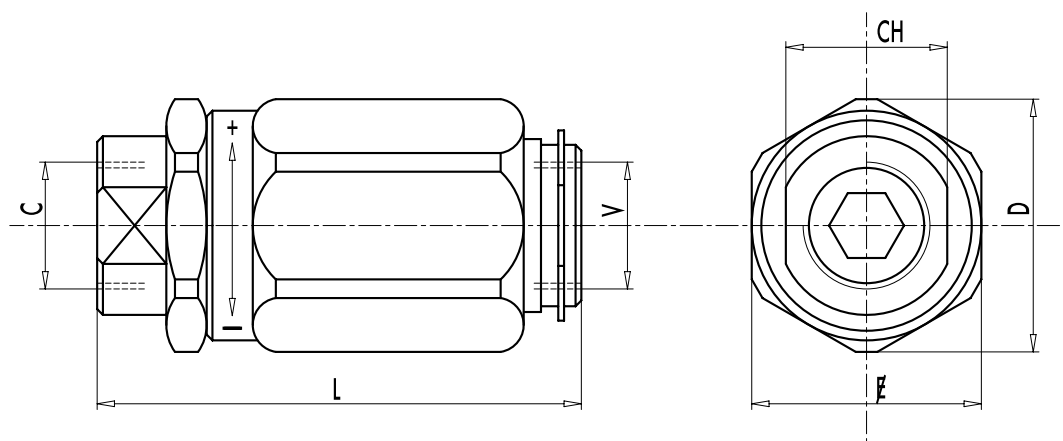

CODICE CODE	SIGLA TYPE	V - C GAS	L mm	F mm	CH mm	D mm	PESO WIGHT kg
<b>BFCV04</b>	VRF 1/4"	G1/4"	66,5	30	19	34	0,274
<b>BFCV06</b>	VRF 3/8"	G3/8"	73	32	24	36	0,330
<b>BFCV08</b>	VRF 1/2"	G1/2"	80	38	27	42	0,484
<b>BFCV12</b>	VRF 3/4"	G3/4"	95	46	32	51	0,824
<b>BFCV16</b>	VRF 1"	G 1"	109	55	41	60	1,314